


## Classic Model Installation

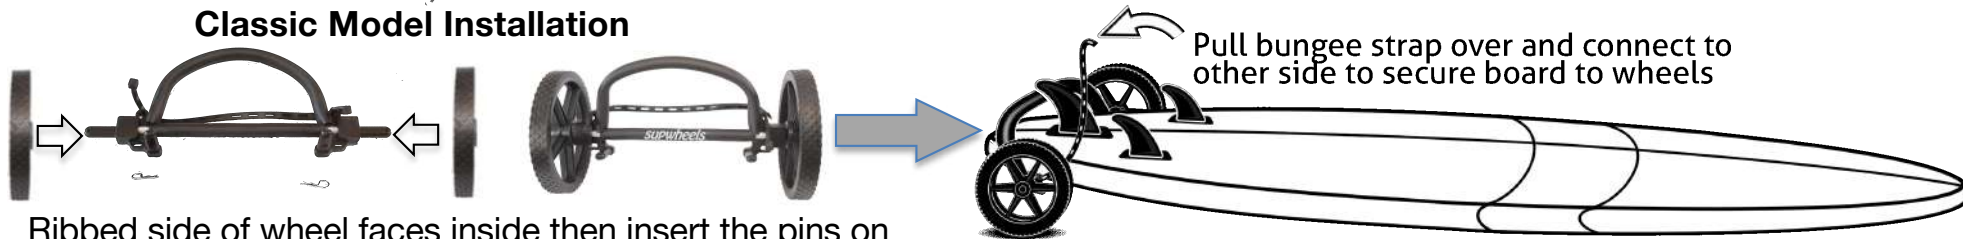

Ribbed side of wheel faces inside then insert the pins on the outside of wheel. PINs are found on the frame pegs.

Pull bungee strap over and connect to other side to secure board to wheels

## Installing Strap Handle Option for the Evolution Models

- Strap handle for Evolution units: (see pictures other side) There is a loop end and mesh/handle end
- Wrapping the strap around the middle of the axle and pull the mesh end through the loop
- Pull it tight and lay strap handle system down with the handle end out slightly longer than your board
- Lay the tail of the board with the fin up on the frame axle and the top of the strap handle system
- Install the bungee on both sides of the frame, leaving room to stretch the bungee over the fin
- Hold the fin and lift the bungee over the board's fin and do not drag the bungee over the fin
- Board's tail should be pushed tightly into the frame without the wheels touching the side of the board
- Buckle the mesh piece to wrap around the nose of the board and adjust the mesh straps
- The nose of the board should be as close to the end of the mesh as possible without going over
- **Turn the board & wheels on its side** and find the length adjustment buckle in the middle of the board
- Pull the length adjustment strap tight so the mesh pulls tight on the nose of the board
- It may be necessary to adjust the straps on the mesh to fit the nose of the board
- Initial installation may require several adjustments (mesh strap and length strap) to ensure proper fit to your board prior to initial use (See our web site for more instructional videos)
- Tie the excess webbing to one of the "Y's" leading to the mesh

## Install On Bike Seat

Twist the handle to make a loop and put the loop over the front of the bike seat.  
The board should be up against the back of the bike seat and away from the back wheel.  
Adjust your bike seat up or twist the handle twice to raise the board above the back wheel if needed.



**WARNING** Product is only to be used for its original intent. It is **NOT** to be used with a gas powered vehicle, carry more than 120 lbs.(54kg), to carry a person or animal, nor is it to be used in dangerous manner or on stairs. Make sure the wheels are clear of the board. **1-Year Limited Warranty** covers faulty construction and parts. Replacement of such parts will be provided pending evaluation of any issue. Coverage of such issue will occur provided the product has not be misused, above warning has been adhered to, product care instructions below have been followed, product has not been left in the elements. Receipt of purchase is required. **Product Care:** For a smoother roll and to extend the life of the product, Lubricate the axle with white grease spray or silicon spray every 2-4 uses. If biking with the unit, lubricate more often. Wipe off all sand and dirt before using. Do not leave product exposed to the elements.

